




290046 SUSPENDED CEILING INSTALLATION

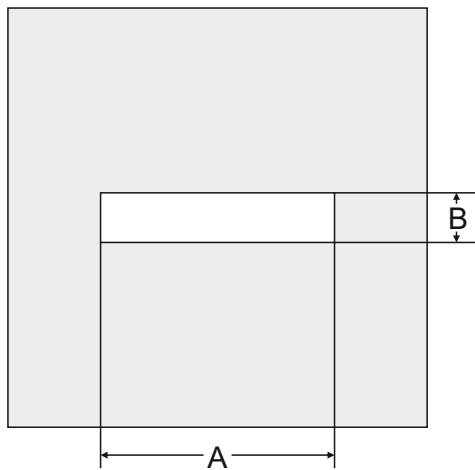


1. Open a hole A= 33cm, B= 7cm.

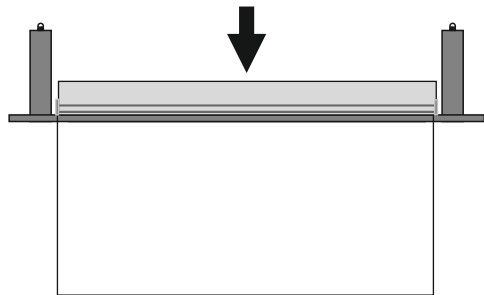


2. Perform the required cable connections and place the illumination sign in to the base.

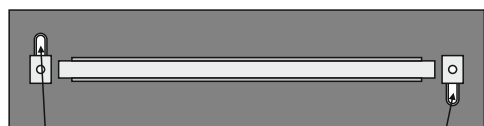

Retaining tags

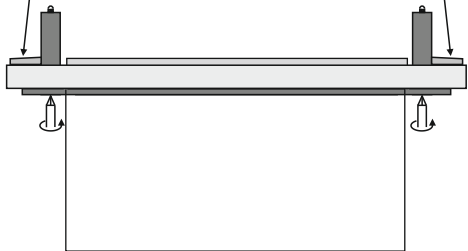


4. Fasten the two retaining screws clockwise and the retaining tags will expand until the base is securely installed.

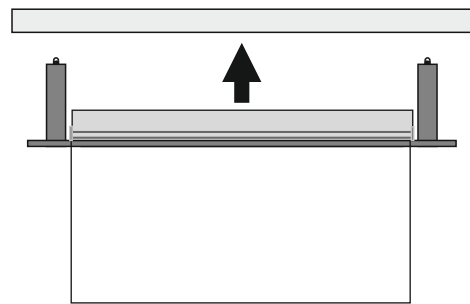


3. Push upwards the base. Make sure that the retaining tags are not expanded.


290046 SUSPENDED CEILING INSTALLATION

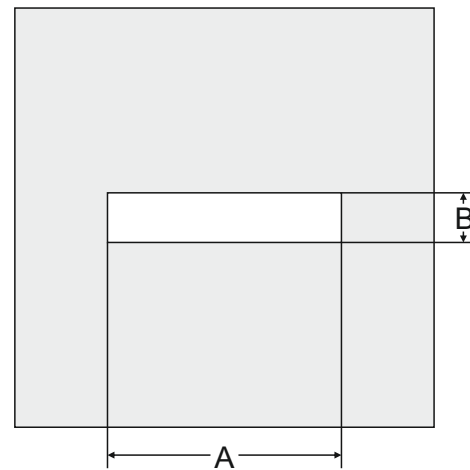


1. Open a hole A= 33cm, B= 7cm.

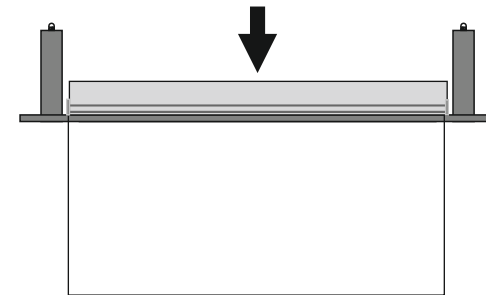


2. Perform the required cable connections and place the illumination sign in to the base.

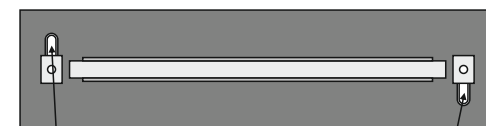

Retaining tags

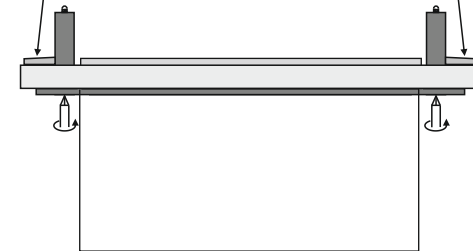

4. Fasten the two retaining screws clockwise and the retaining tags will expand until the base is securely installed.

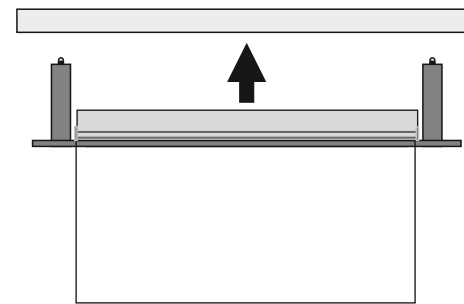

3. Push upwards the base. Make sure that the retaining tags are not expanded.