


Tablet PC T2

Dimensional drawings:

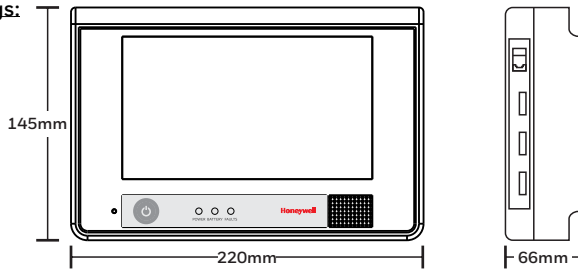

Features:

- Status indication LEDs
- Ethernet connection
- USB connection
- HDMI connection
- WiFi Connection
- System buzzer

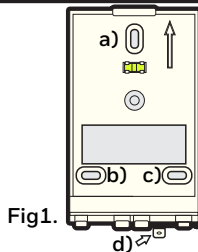


Fig1.



Fig2.

Installation:

1. Wall installation: Mount the detachable bracket on a vertical wall surface (drill according to the mounting holes a, b, c). See Fig 1. Use the spirit level to align horizontally. Put the Tablet PC in the detachable bracket and tighten the screw on the bottom to secure it in place (Fig1, hole d). Connect the mains power cable on the socket, on the left side of the tablet.

2. Table installation: Screw the included metal stand on the back of the detachable bracket. Put the Tablet PC in the detachable bracket and tighten the screw on the bottom to secure it in place Fig1, hole d). Connect the mains power cable on the socket, on the left side of the tablet.

LED indications:

POWER (Green): ON when the system is running and mains power is connected.

Blinking when the system is running and mains power or battery is disconnected (1bl/s).

Double blinking when the system is offline and battery is charging (2bl/2s).

Triple blinking when the system is offline and mains power is connected (3bl/2s).

OFF when the system is offline and mains power is disconnected.

BATTERY (Yellow): ON when the battery is connected.

Blinking when the battery is depleted (1bl/s).

OFF when the battery is disconnected / system offline.

FAULT (Red) : ON when there is a current fault on the system.

Blinking when there is a new event (1bl/s).

OFF when the battery is disconnected / system offline.

Button functions - BT1: Long press (>3s): Turn-on and turn-off Wireless Tablet PC.

Button function - BT2: Reset the system. This button is accessible through a small hole left of Bt1


Buzzer:

• Normal tone - When the device receives a notification from Tela2 software, (3Beeps/sec).

• Fast tone - battery is depleted / cut-off pending (5Beeps/s).

Default settings:

- Wireless Tablet PC Administrator menu password: 1000

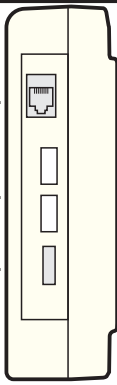


Side connections:

1. Ethernet (RJ45) port
2. 2xUSB ports
3. HDMI output


Battery replacement:

Deactivate the system, unscrew the battery cover, disconnect the battery and replace it. Fasten the battery cover again and reactivate the system.

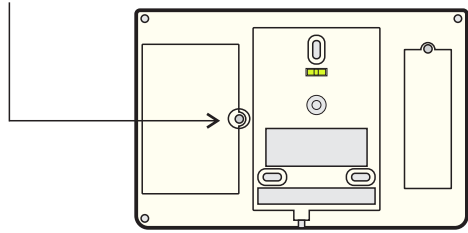

Battery: SPA 6V-1.3Ah (Lead Acid)

Technical description	PC Wireless T2
Part no.:	138091.12
Operating voltage	220 - 240V AC / 50-60Hz
Maximum power consumption	23VA
Battery type	6V / 1.3Ah (Lead Acid)
Duration (Battery Mode)	1hour
Ambient temperature range	5 to 40 °C
Storage temperature range	-40 to 70 °C
Relative humidity:	95%
Weight	1000gr
Dimensions (L x W x H)	220 x 66 x 145 mm

 At the end of their useful life the packaging, battery and product should be disposed of via a suitable recycling centre.
Do not dispose of with your normal household waste.
Do not burn.

