

VESDA[®] by Xtralis

Refrigerated Storage Design Guide

August, 2014

Doc. 11723_15

Disclaimer

The contents of this document is provided on an "as is" basis. No representation or warranty (either express or implied) is made as to the completeness, accuracy or reliability of the contents of this document. The manufacturer reserves the right to change designs or specifications without obligation and without further notice. Except as otherwise provided, all warranties, express or implied, including without limitation any implied warranties of merchantability and fitness for a particular purpose are expressly excluded.

Intellectual Property and Copyright

This document includes registered and unregistered trademarks. All trademarks displayed are the trademarks of their respective owners. Your use of this document does not constitute or create a licence or any other right to use the name and/or trademark and/or label. This document is subject to copyright owned by Xtralis. You agree not to copy, communicate to the public, adapt, distribute, transfer, sell, modify or publish any contents of this document without the express prior written consent of Xtralis.

General Warning

This product must only be installed, configured and used strictly in accordance with the General Terms and Conditions, User Manual and product documents available from Xtralis. All proper health and safety precautions must be taken during the installation, commissioning and maintenance of the product. The system should not be connected to a power source until all the components have been installed. Proper safety precautions must be taken during tests and maintenance of the products when these are still connected to the power source. Failure to do so or tampering with the electronics inside the products can result in an electric shock causing injury or death and may cause equipment damage. Xtralis is not responsible and cannot be held accountable for any liability that may arise due to improper use of the equipment and/or failure to take proper precautions. Only persons trained through an Xtralis accredited training course can install, test and maintain the system.

Liability

You agree to install, configure and use the products strictly in accordance with the User Manual and product documents available from Xtralis.

Xtralis is not liable to you or any other person for incidental, indirect, or consequential loss, expense or damages of any kind including without limitation, loss of business, loss of profits or loss of data arising out of your use of the products. Without limiting this general disclaimer the following specific warnings and disclaimers also apply:

Fitness for Purpose

You agree that you have been provided with a reasonable opportunity to appraise the products and have made your own independent assessment of the fitness or suitability of the products for your purpose. You acknowledge that you have not relied on any oral or written information, representation or advice given by or on behalf of Xtralis or its representatives.

Total Liability

To the fullest extent permitted by law that any limitation or exclusion cannot apply, the total liability of Xtralis in relation to the products is limited to:

- (i) in the case of services, the cost of having the services supplied again; or
- (ii) in the case of goods, the lowest cost of replacing the goods, acquiring equivalent goods or having the goods repaired.

Indemnification

You agree to fully indemnify and hold Xtralis harmless for any claim, cost, demand or damage (including legal costs on a full indemnity basis) incurred or which may be incurred arising from your use of the products.

Miscellaneous




If any provision outlined above is found to be invalid or unenforceable by a court of law, such invalidity or unenforceability will not affect the remainder which will continue in full force and effect. All rights not expressly granted are reserved.

Document Conventions

The following typographic conventions are used in this document.

Convention	Description
Bold	Used to denote: emphasis Used for names of menus, menu options, toolbar buttons
<i>Italics</i>	Used to denote: references to other parts of this document or other documents. Used for the result of an action

The following icons conventions are used in this document.

Convention	Description
	Caution: This icon is used to indicate that there is a danger to equipment. The danger could be loss of data, physical damage, or permanent corruption of configuration details.
	Warning: This icon is used to indicate that there is a danger of electric shock. This may lead to death or permanent injury.
	Warning: This icon is used to indicate that there is a danger of inhaling dangerous substances. This may lead to death or permanent injury.

Contact Us

UK and Europe +44 1442 242 330 **D-A-CH** +49 431 23284 1 **The Americas** +1 781 740 2223

Middle East +962 6 588 5622 **Asia** +86 21 5240 0077 **Australia and New Zealand** +61 3 9936 7000

www.xtralis.com

Preface

Xtralis has produced this Design Guide as a reference, to be consulted when designing and specifying VESDA fire protection solutions for freezers, cold storage areas and loading bays with temperatures ranging from -40°C (-40°F) to 18°C (65°F).

Unlike most commonly used passive fire detection devices, VESDA detectors are able to function in sub-zero climates without losing their very early warning smoke detection capabilities. For this reason, they have been extensively used in refrigerated storage facilities for many years and are, in fact, the only Factory Mutual (FM) approved smoke detection and fire suppression activation system for such facilities.

In this Design Guide we will discuss the relevant design considerations and make recommendations regarding the most effective way in which to install a VESDA solution in the particular refrigerated storage facility for which it is being designed.



Notes!

- The information contained in this Design Guide should be used in conjunction with specific local fire codes and standards as well as the guidelines provided in the VESDA System Design Manual^[1]. Where applicable, other regional industry practices should also be adhered to.
- It should be noted that reliable operation of VESDA detectors will be compromised in cold storage areas experiencing heavy icing due to the build environment and/or operational conditions. Proper assessment of the cold storage area should be undertaken prior to applying VESDA detectors.

Contents

1	Background Information.....	1
1.1	Fire Safety Considerations in Refrigerated Storage Areas	1
1.2	Performance-Based Design.....	1
1.3	Key Design Considerations	2
1.4	Why Use VESDA Smoke Detection?	2
2	Design for Effective Fire Protection	4
2.1	Levels of Protection	4
2.2	Sampling Pipe Material	4
2.3	Positioning Pipes and Sampling Holes.....	5
2.4	Sampling Pipe Insulation.....	7
2.5	Sealing Sampling Pipe Penetrations.....	7
2.6	Compensating for Sampling Pipe Contraction	7
2.7	In-rack Protection.....	8
2.8	Ceiling Void Protection	8
2.9	Other Areas to be Protected	9
3	Preventing Condensation and Crystallization	10
3.1	Effects of Temperature Drop	10
3.2	Condensation on the Sampling Pipe Outer Surface.....	10
3.3	Crystallization on the Sampling Pipe Outer Surface	11
3.4	Condensation Inside Sampling Pipes	11
3.5	Crystallization Inside Sampling Pipes.....	12
3.6	Refrigerated Storage Sampling Kit.....	13
4	Installation Considerations	15
4.1	Sampled Air Warming	15
4.2	Heat Tracing	16
4.3	Exhaust Air	16
4.4	Water Trap.....	17
4.5	Integration with Pre-action Sprinklers	18
4.6	Battery Backup.....	19
5	Ongoing Considerations.....	20
5.1	Running the VESDA System.....	20
5.2	Blow-Back Air System	20
5.3	System Commissioning.....	21
5.4	Service and Maintenance.....	21
	Appendix – Heat Tracing	22
6	References	24
7	Disclaimer On The Provision Of General System Design Recommendations	25

1 Background Information

1.1 Fire Safety Considerations in Refrigerated Storage Areas

Major fire risks within a refrigerated storage facility arise from the following^[2]:

- Electrical or mechanical faults in conveyor and other transport equipment.
- Electrical equipment, wiring and other equipment housed in the roof space.
- The lighting system.
- Hot spots resulting from maintenance operations.
- Discarded cigarette butts.
- Arson.

1.2 Performance-Based Design

The unique environments within Refrigerated Storage Facilities present a challenge to both early and reliable fire detection. Detection system performance can be influenced by factors such as air change rate, temperature, humidity and the geometry of the area to be protected. The flexibility of Performance-Based Design, while still following rigorous engineering processes, allows the fire protection system to be tailored to the specific requirements of each individual application's environment, with the commercial drivers to manage the risks.

VESDA sampling holes spacing is traditionally dictated by local prescriptive codes and standards. In a Performance-Based approach, each installation is assessed according to its specific environmental conditions. Sampling hole spacing and location can then be altered to meet the particular design objectives.

The Performance-Based Design approach is widely used since it can provide evidence to justify divergence from prescriptive requirements, particularly in cases where there are practical limitations or a need for an improved level of fire protection. There are some specific guidelines for the use of Performance-Based Design and risk management concepts.

Examples of these codes and standards are listed below:

- AS/NZ 4360 Risk Management Standard^[3].
- SFPE Handbook of Fire Protection Engineering Third Edition^[4].
- International Fire Engineering Guidelines^[5].
- British Standard BS7974^[6].
- SFPE Engineering Guide to Performance-Based Fire Protection^[7].



Note!

The SFPE Code Officials' Guide to Performance-Based Design Review^[8] is a very good source of information for Authorities Having Jurisdiction (AHJ) reviewing and assessing a VESDA system design for a refrigerated storage facility.

Performance-Based fire protection solutions can be made to comply with local and national codes and standards for buildings and life safety. Assessments of the environmental risks and performance requirements, specific to the particular Refrigerated Storage Facility, are conducted as part of the design process.

1.3 Key Design Considerations

For the purposes of this Design Guide, the following temperature ranges apply to the various areas to be protected:

- Freezers -40°C to -15°C (-40°F to 5°F).
- Chillers -9°C to 2°C (16°F to 36°F).
- Coolers and Loading Bays 0°C to 18°C (32°F to 65°F).



Note!

VESDA detectors MUST NOT be installed in sub-freezing environments.

The following should be considered when designing a VESDA system for a refrigerated storage facility:

- What level of protection is required and how will fire safety be managed?
- Is the integrity of the sampling pipe network adequate with respect to being air-tight?
- What temperature range and humidity will be experienced by sampling pipes within the refrigerated storage facility, sampling pipes in any other areas to be protected and the detectors themselves?
- Are there likely to be any future changes with regard to the function of the area due to demand or operational needs? For example, might a refrigerated storage facility be converted to a cold storage area?
- What are the airflow characteristics of the protected areas, entrances and loading bays?
- What are the sampling pipe insulation requirements?
- What effects might the defrost cycles and associated condensation have on fire protection?
- What is the possibility of condensation occurring both within and on the outside of the sampling pipe network?
- What is the configuration of racking within the areas to be protected?
- How well sealed are the wall and ceiling insulation panels?
- Is pre-action suppression to be included in the fire protection system and, if so, how will it be integrated with the VESDA system?



Note!

It should be noted that reliable operation of VESDA detectors will be compromised in cold storage areas experiencing heavy icing due to the build environment and/or operational conditions (i.e. inadequate dehumidification). Proper assessment of the cold storage area should be undertaken prior to applying VESDA detectors.

1.4 Why Use VESDA Smoke Detection?

VESDA Aspirating Smoke Detection (ASD) systems have been used to protect refrigerated storage facilities for many years. Most fire protection technologies which are designed to operate in freezing conditions are not capable of early warning detection and are prone to being damaged by equipment such as forklift trucks. The very early warning capability of VESDA detectors means that they are able to detect the incipient (pre-combustion) stage of a fire which drastically reduces business disruption, asset damage and the potential risks to the safety of personnel. The design flexibility of VESDA systems also allows them to be used for the automatic activation of pre-action suppression, both gaseous and sprinkler.

The combustible nature of the types of materials normally stored in refrigerated environments, combined with the very dry high airflow in such environments, creates a significant fire risk. Fires will spread rapidly between cardboard or plastics packaging, grease impregnated materials, food stuffs and wooden pallets. Hence, the earlier a fire can be detected the better.

The perishable nature of the goods, commonly stored in freezers or coolers, makes it essential that any rise in temperature be avoided. Heat from a fire or a rise in temperature due to refrigeration system down time following a fire, would both result in stock spoilage and hence loss of revenue. Even an incipient fire, in this

type of environment, can lead to significant losses if not detected and managed early. Stock exposed to low levels of smoke over an extended period of time will become contaminated.

Other advantages of the VESDA system are that, with a properly designed system, performance will be reliable and little influenced by condensation or the high airflows caused by blast chillers.

The deficiencies of other detector technologies in low temperatures are recognized by many international codes and standards which regulate against the use of them in environments where the ambient temperature is less than 0°C (32°F)^[9]. Linear heat cables are permitted in freezers but are prone to damage by forklift trucks and other common work procedures. Since VESDA detectors are installed outside the protected area, only the sampling pipe network is exposed to sub zero temperatures. Being on the ceiling and inside voids makes it unlikely that the VESDA sampling pipes will be damaged.

**Note!**

Unlike the FM approved VESDA system, linear heat cables are specifically for the activation of pre-action suppression and cannot simultaneously provide the very early warning smoke detection which may prevent the need for suppression.

2 Design for Effective Fire Protection

In this section, design methodologies will be described with consideration for the different requirements depending on the function of the particular area being protected.



Note!

The latest version of ASPIRE2™, the VESDA sampling pipe modelling program, should be used for all pipe network designs.

2.1 Levels of Protection

Due to the large amounts of plastic present in this type of facility, in the form of packaging materials, a fire would produce large amounts of highly toxic and corrosive smoke which would damage assets and endanger personnel. The large amounts of fuel available, in the form of stock and the highly flammable light weight sandwich panels from which such facilities are constructed, would also cause fires to spread quickly from one area to another. Table 1 provides guidelines for those areas in a refrigerated storage facility that it is essential to protect.

Table 1 – Guidelines for areas to be protected.

Area	Essential	Recommended	Optional
Freezers/Chiller Rooms	✓		
Coolers	✓		
Plant and Maintenance Areas	✓		
Return Air Path Under the Protected Area		✓	
Loading Bays and Surrounding Areas	✓		
Office/Monitoring Area			✓
Ceiling/Roof Voids	✓		
Within Racks			✓

In cases where a pre-action sprinkler system is to be included as part of the fire protection, the VESDA system can be used to activate the release mechanisms as discussed in Section 0.

2.2 Sampling Pipe Material

The choice of sampling pipe material will depend on where the pipe is to be located. For instance, installation of ceiling mounted sampling pipes can be made easier by using long lengths of pipe material suited to coping with low temperatures and internal temperature fluctuations. Such materials include the Halogen-free Fire-retardant high Temperature (HFT) plastics, Acrylonitrile Butadiene Styrene (ABS) and High Density Polyethylene (HDPE). Suitable materials and their properties are presented in Table 2 below.

Table 2 – Properties and recommended applications for sampling pipe materials^{[10][13]}.

Material	Operating Temperature	Linear Thermal Contraction/Expansion
PVC	-18°C to 49°C (-40 to 120°F)	7.0 mm per 10 m per 10°C (0.28" per 32.8 ft per 18°F)
HFT	-40 to 140°C (-40 to 284°F)	7.0 mm per 10 m per 10°C (0.28" per 32.8 ft per 18°F)

Material	Operating Temperature	Linear Thermal Contraction/Expansion
ABS	-40 to 80°C (-40 to 176°F)	10.1 mm per 10 m per 10°C (0.4" per 32.8 ft per 18°F)
CPVC	-18 to 94°C (0 to 201°F)	6.7 mm per 10 m per 10°C (0.26" per 32.8 ft per 18°F)
PE-80	-50 to 60°C (-58 to 140°F)	20 mm per 10 m per 10°C (0.79" per 32.8 ft per 18°F)
PE-100	-50 to 60°C (-58 to 140°F)	13 mm per 10 m per 10°C (0.52" per 32.8 ft per 18°F)

An added advantage of using a continuous semi-flexible pipe material such as HDPE^[13] is the reduction in the number of pipe junctions required.

2.3 Positioning Pipes and Sampling Holes

The various international codes and standards specify detection point spacing or maximum area of coverage per detection point for a variety of different airflow rates, ceiling heights and structures etc. In compliance with these prescriptive regulations, VESDA sampling holes would be located in the same positions as individual smoke detection devices. Alternatively, with reference to local codes, the sampling pipe and sampling hole configuration can be determined by satisfying performance-based design requirements.



Note!

For Factory Mutual (FM) approved, refrigerated storage, VESDA installations the sampling holes should be placed as for heat detectors as outlined in the latest edition of the FM 8-29 Datasheet and Memorandum 0805^{[14],[15]}.

Sampling hole locations are usually represented by a grid like that shown below (Figure 1). The letter X represents the sampling hole spacing required according to local codes and standards.

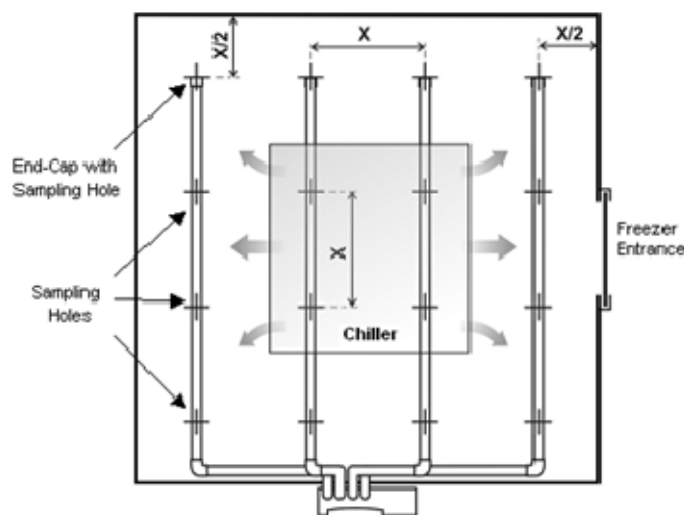


Figure 1 – VESDA sampling holes grid layout.

In some freezers, depending on the effectiveness and frequency of defrosting management, ice will build up around the entrances. Under these circumstances, VESDA sampling holes in the immediate proximity may become blocked by ice. This is normal and can be managed by specifying an appropriate system airflow fault threshold. The effects of blocked sampling holes could be compensated for as follows:

- By placing the sampling hole closest to the entrances as far away as is legally permitted by local codes and standards.

- By partial in-rack sampling near the entrances. Ice build-up is usually at the ceiling above the doorways, seldom within the racks.
- By placing VESDA sampling pipes away from the path of chiller air supplies.

**Note!**

Sampling hole diameter **MUST** be larger than 3 mm.

Referring to the grid layout shown above (Figure 1), there are two alternative approaches to sampling pipe network configuration design for optimal air sampling performance:

1. The sampling pipes can be run along the ceiling inside the area to be protected as shown below (Figure 2). This technique minimizes the number of pipe penetrations through the walls or ceiling and can be applied in most practical situations. Sampling holes **MUST** be drilled after installation in this case.
2. The sampling pipes can be positioned outside the area to be protected with smaller diameter capillary tubes (16 mm (3/4 in) outer diameter) fed through the ceiling insulation into the protected area as shown below (Figure 3). This method requires one ceiling penetration per capillary tube and more pipe connections. All penetrations must be adequately sealed to prevent the formation of ice resulting from the entry of humid air or condensation. This approach is only appropriate where the refrigerated storage facility has a ceiling void. The capillary sampling tubes should be as short as possible; less than 4 m (13 ft) being recommended. They **MUST** also be sealed during installation.

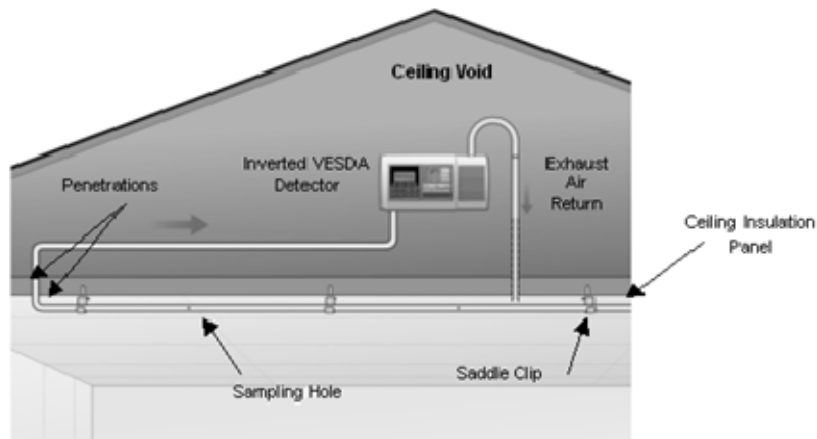


Figure 2 – Ceiling mounted VESDA sampling pipes.

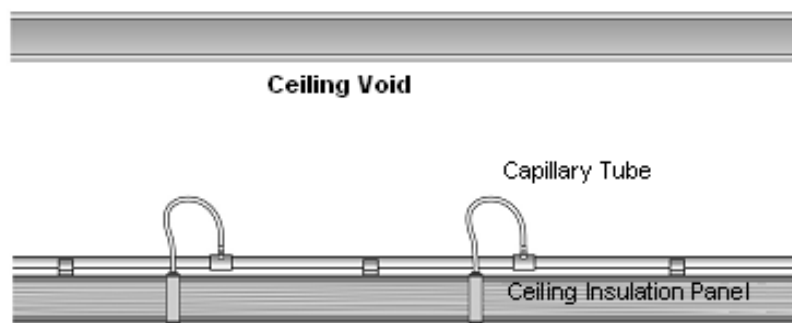


Figure 3 – Example of capillary air sampling.

**Note!**

It is recommended that all drilling of penetration points, and the sealing of such points, be performed by appropriately experienced personnel.

2.4 Sampling Pipe Insulation

Where sampling pipe insulation is needed, use a material such as Armaflex or similar. Armaflex insulation has a temperature range of -40°C (-40°F) to 105°C (221°F), a density of 88 to 105 kg/m³ and is very flexible. For a 25 mm (0.98") internal bore pipe, a single layer of insulation 9 mm (0.35") thick is adequate.

2.5 Sealing Sampling Pipe Penetrations

Sampling pipe penetrations, through ceiling or wall insulation panels **MUST** be properly sealed with a solid (Urethane foam) and/or flexible (mastic) material. To enhance air-tightness, a seal and/or insulation boot could also be installed at the penetration point. Consult local Wall Panel Suppliers for more detailed instructions.

2.6 Compensating for Sampling Pipe Contraction

Mounting clips, used to secure VESDA sampling pipes to the ceiling, **MUST** not restrict longitudinal movement of the pipes as they expand or contract due to temperature variations. This is especially important where the pipe network is installed before the refrigerators are turned on. For example, according to its thermal expansion coefficient, an ABS pipe will contract by 0.1% for every 10°C (50°F) drop in temperature. This equates to a 40 mm (1.57 inch) reduction in length for a 40 m (131.2 ft) pipe and will result in disconnection of pipe sections in cases where the pipes were installed in temperatures well above the intended operating temperature.




Note!


Refer to Table 2 for the thermal properties of other commonly used pipe materials.

To prevent pipe disconnections, make allowance for pipe contraction along the length of the pipes.


Saddle or offset clips should be used to secure the VESDA sampling pipes to the ceiling as shown below (Figure 4).

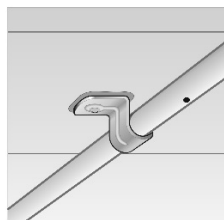

Saddle Clip

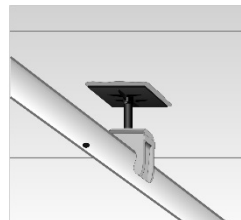

Offset Clip

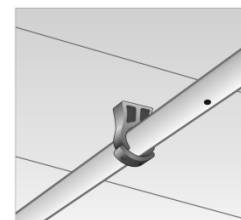

Pipe Clip (UK)

Figure 4 – Examples of pipe network supports.

Offset clips are preferable since they attach to the ceiling via an adhesive pad and, if required, can be screwed on to the ceiling. The design of offset clips also allows easy movement of the pipes during expansion or contraction.

To further minimise the possibility of pipe disconnections, pipe mounting clips **MUST** not be positioned next to pipe joiners. Clips **MUST** also be more than 300 mm from the ends of the pipes so that a pipe contraction will not cause its end caps to be forced off.

2.7 In-rack Protection

In most cases, placing a VESDA sampling pipe network on the ceiling is all that is needed. However, sampling pipes can also be located along the racks used for storage in the refrigerated area as shown below (Figure 5).



Figure 5– Example of in-rack air sampling.

Wherever possible, the in-rack sampling pipe should enter the protected area through the wall at the height that the pipe will be positioned in the rack.



Note!

Capillary air sampling is not recommended for in-rack sampling.

2.8 Ceiling Void Protection

Very early smoke detection is essential due to the high incipient fire risk presented by the electrical cabling and refrigeration control equipment normally housed in the ceiling void. Some local codes and standards specify that ceiling void protection must be a component of the fire protection system.

The sampling hole spacing is determined, with reference to local codes and standards, according to the grid presented earlier (Figure 1) and is shown below (Figure 6).

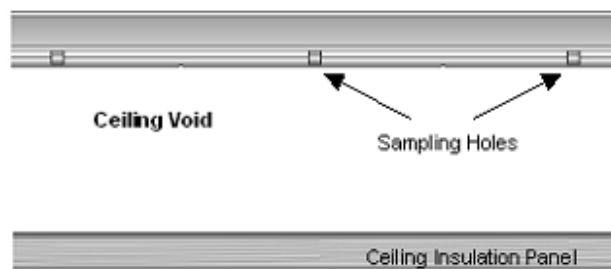


Figure 6 – Example of ceiling void air sampling.

The VESDA detectors used to protect the ceiling void **MUST** be configured as individual fire zones. Ceiling void pipes **MUST NOT** enter any other areas, nor should ceiling void detectors be used to simultaneously monitor areas outside the ceiling void.

2.9 Other Areas to be Protected

For non-refrigerated storage areas such as those used for control, monitoring, loading and office space, the sampling hole spacing and pipe network layout are identical to those for the general office environment described in the VESDA System Design Guide^[1], with reference to local codes and standards where applicable. Detector sensitivity can be adjusted to meet performance requirements.

**Note!**

It is worth considering high sensitivity smoke detection in the areas containing refrigeration control and support equipment, since smoke or fire damage in these areas would disrupt business.

3 Preventing Condensation and Crystallization

3.1 Effects of Temperature Drop

Condensation will occur when the air temperature drops below its dew point. The result is the formation of water droplets (if the dew point is above 0°C (32°F)) or ice crystals (if the dew point is below 0°C (32°F))^[16]. Inside the VESDA sampling pipe network, condensation is unlikely and will only occur if the sampled air is cooled as it passes along the pipe through an area of lower temperature than that from which it was sampled. On the outer surface of sampling pipes, condensation is expected and can be tolerated.

During system design, all areas to be protected must be categorised according to the criteria listed below:

- The temperature and humidity changes that will occur if the function of the protected area is changed, for example, from a chiller to a cooler.
- The points in the pipe network which are most likely to be prone to condensation. This is done by assessing the temperature of the sampled air and the temperature of the air surrounding the sampling pipe network.
- The air-tightness of the pipe network, including the detector exhaust pipe.
- The distances, from both the protected area entrances and chiller air supply paths, of both the sampling pipe and sampling holes.

3.2 Condensation on the Sampling Pipe Outer Surface

Condensation occurs on the outer surface of the sampling pipes and capillary tubes where they exit the cold storage area and enter warmer environments such as a ceiling void or other non-freezer areas. Depending on the temperature of the pipe surface, in these areas, water droplets or ice crystals will form. In order to minimise condensation at the penetration point, the section of pipe exiting the protected area **MUST** be insulated as shown in Figure 7, and sampling flowrate minimised within the constraints of the design. A water tray should be used to collect any liquid before it spills over the ceiling insulation panels as shown below.

**Note!**

The water tray must be large enough to allow evaporation to occur at an acceptable rate to prevent overflow.

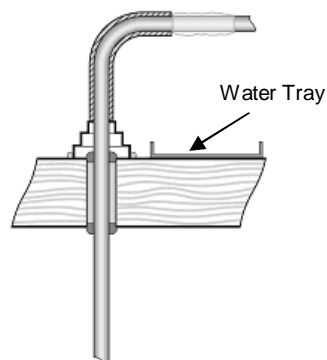


Figure 7 – Example of a water tray.

3.3 Crystallization on the Sampling Pipe Outer Surface

Occasionally, ice will form on the exterior of the sections of sampling pipe close to the refrigerator entrances as shown below (Figure 8). This ice build up is normal and has no adverse effect on the operation of the VESDA system, provided that sampling holes are not located in the susceptible sections of pipe where they can become blocked. Sampling holes nearest to the entrances should be sprayed with silicone to prevent ice formation. To remove ice accumulation around sampling holes a blow-back method with compressed air is recommended – see section 5.2.

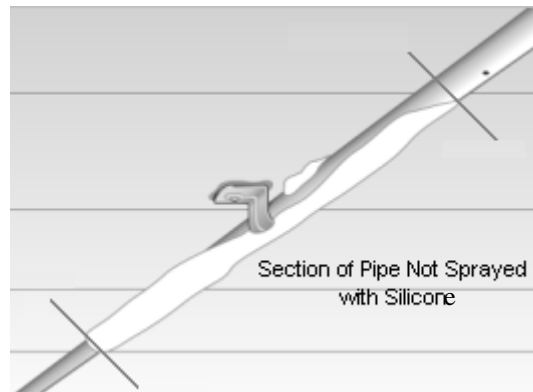


Figure 8 – Example of ice formation on sampling pipes close to the refrigerator entrance.

3.4 Condensation Inside Sampling Pipes

Condensation inside sampling pipes, outside the protected area is rare. However, it can occur if the function of the protected area changes and/or as a result of seasonal temperature variations. For example, if a chiller (-9°C, 16°F) is converted to a cooler (8°C, 46°F), condensation may form inside the pipes outside the cooler during winter when the temperature could conceivably drop below 8°C (46°F).

The following measures will ensure that condensation forming in the pipes does not enter the detector:

- Install the detector in the inverted position with the pipe entering it from below as shown above (Figure 2).
- Install a water trap as discussed later in Section 4.4.

3.5 Crystallization Inside Sampling Pipes

In order to minimise the possibility of ice plug formation inside the sampling pipe, 90° elbow junctions between pipe sections should be avoided. Where it is essential to change the orientation of the pipe from horizontal to vertical, or vice versa, large radius bends should be used.

The chiller air supply is several degrees lower than the air in the rest of the chiller so, to prevent ice from forming and blocking the sampling holes, sampling pipes MUST NOT be installed in the direct path of the chiller's supply air vent. Doing so will lead to crystallisation when the warmer ambient air in the protected area enters the cool pipe. If for practical reasons, this cannot be avoided, the pipe MUST be insulated as shown below (Figure 9).

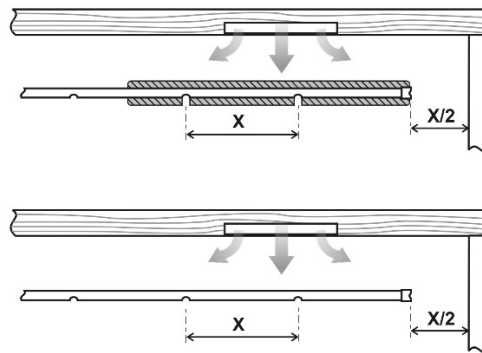


Figure 9 – Example of pipe insulation to combat ice formation in pipes directly in the path of the chiller air supply (the top is a good design, the bottom is not).

**Note!**

Sampling pipes MUST NOT run from a high temperature area into a lower temperature area. Separate VESDA detectors should be installed in the chiller, cooler, ceiling void, and office areas.

3.6 Refrigerated Storage Sampling Kit

The Xtralis Refrigerated Storage Sampling Kit is an innovative sampling arrangement recommended for refrigerated storage facilities, with or without ceiling cavities, experiencing frequent ice build up issues.

The sampling kit as shown in Figure 10, branches off the main pipe and with its unique design the sampling hole is transposed to an upstream location (i.e. at ambient temperature) while maintaining an open ended pipe inside the refrigerated area. This arrangement significantly reduces ice blockage whilst enabling pipe network maintenance to be carried out entirely above the refrigerated area at ambient conditions rather than extreme temperature conditions inside the refrigerated area.

The Xtralis Refrigerated Storage Sampling Kit is suitable for temperatures down to -40°C (-40°F) and comprises two sets of parts:

- (a) Above refrigerated storage ceiling: outer flange, flow restrictor and flexible pipe that connects to the main pipe.
- (b) Below refrigerated storage ceiling: inner flange and inlet funnel to assist with flow streamlining

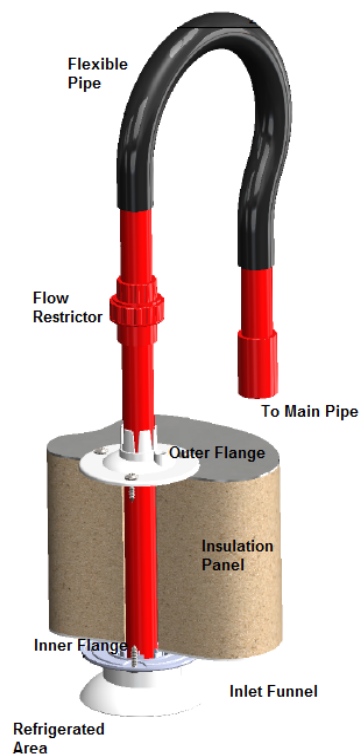


Figure 10 – Xtralis Refrigerated Storage Sampling Kit

The flow restrictor (Figure 11) can be drilled to any size and for ASPIRE2 modelling purposes it is approximated as a sampling hole at the end of the pipe run (i.e. at the open ended pipe).

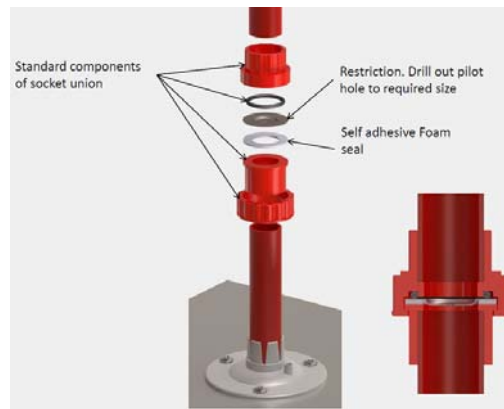


Figure 11 – Xtralis Refrigerated Storage Sampling Kit / Flow Restrictor Assembly

For further details on installation and maintenance procedures, refer to the Xtralis Refrigerated Storage Sampling Kit Application Note (doc No. 25272).

4 Installation Considerations

4.1 Sampled Air Warming

For optimum detection and ease of maintenance access, the VESDA detector MUST be installed in a location where it is unlikely to experience sub-zero temperatures. Low temperature sampled air can be easily warmed up, before it reaches the detector, by extending the sample pipe length beyond its point of exit from the cooler protected area. The warmer air outside the pipe near the detector will heat the cold sampled air within it. Usually, only a short pipe extension is necessary.

The charts below (Figure 12 to Figure 14) provide conservative estimates of the pipe extensions required, to raise the temperature of the sampled air to an acceptable value, for a number of commonly used pipe materials and range of flow rates. All calculations assume an external ambient temperature of 20°C (68°F) and a sampled air temperature of 4°C (39°F).

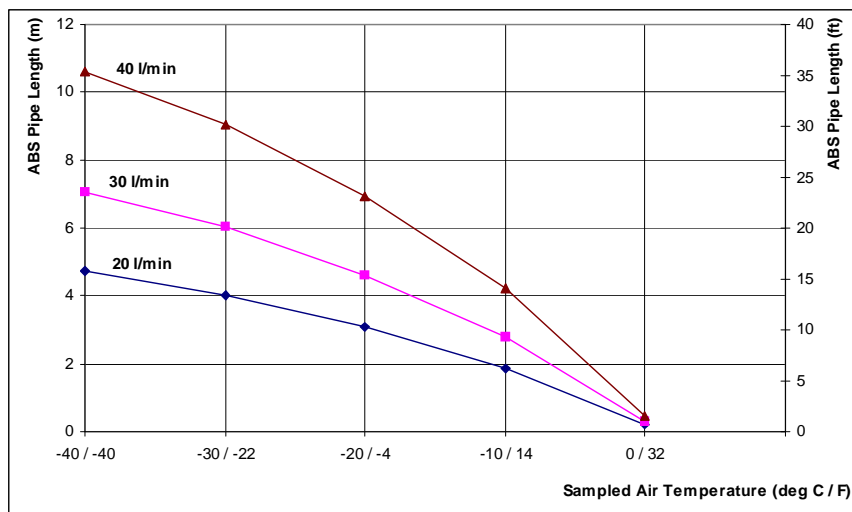


Figure 12 – Chart showing the estimated required ABS pipe extension for sampled air warming.

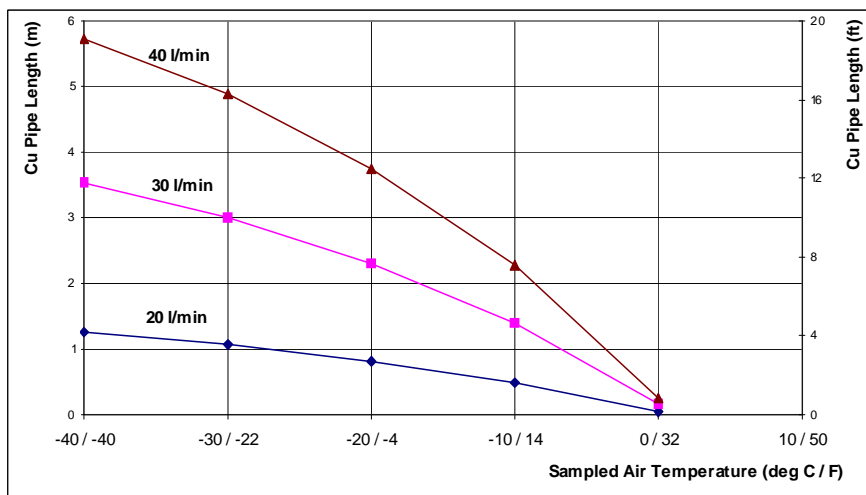


Figure 13 - Chart showing the estimated required Copper pipe extension for sampled air warming.

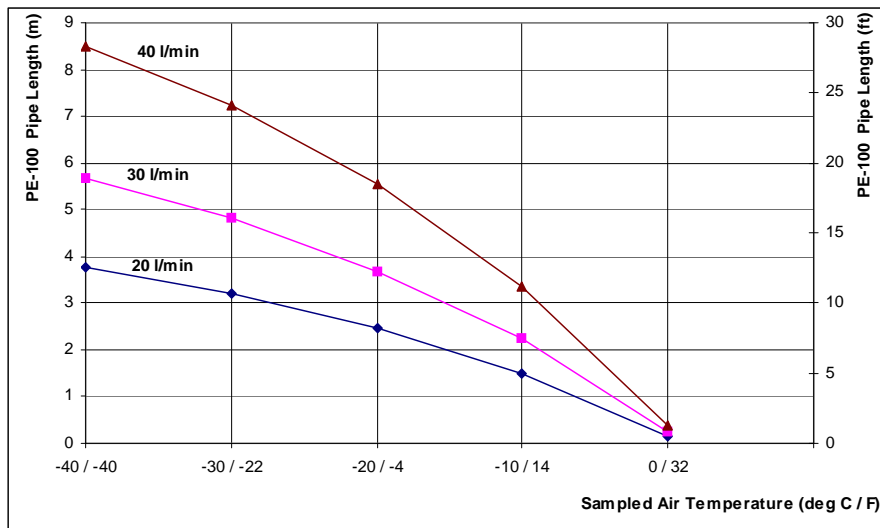


Figure 14 - Chart showing the estimated required PE-80/PE-100 pipe extension for sampled air warming.

4.2 Heat Tracing

In extreme cases where there is no space to run pipe extensions or the external temperature varies widely, heat tracing may be employed for sampled air warming. However, this approach to warming sampled air is NOT recommended by Xtralis as it has not been validated by Factory Mutual (FM).



Note!

The Appendix contains information on the copper pipe and heat tape lengths required for sampled air warming. No design guidelines will be given here. If wishing to use heat tracing, appropriately qualified Engineers MUST be consulted as to the most suitable method to be used.

4.3 Exhaust Air

Air from the VESDA exhaust pipe MUST be returned to the area from which it was sampled as shown below (Figure 15). The exhaust pipe should be as short as possible and its penetration into the protected area MUST be air-tight.

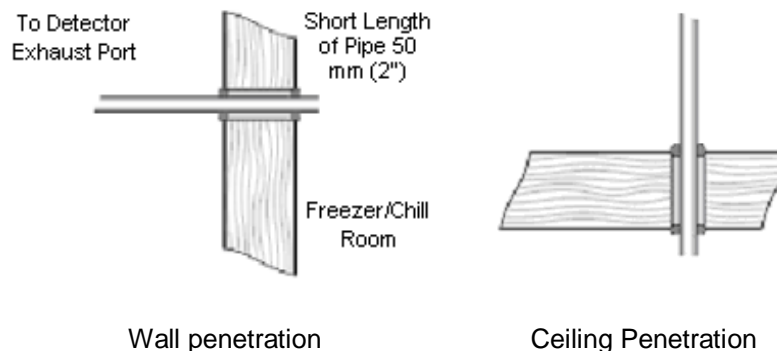


Figure 15 – Examples of a VESDA exhaust pipe being fed back into the area from which the air sample was taken.

This closed loop system will prevent pressure differences that might lead to airflow faults and prevent moisture migration into the refrigerated area when the VESDA detector is powered down.

**Note!**

All inlet and exhaust pipes **MUST** be closed off whenever the VESDA system is powered down or detectors are removed for maintenance.

4.4 Water Trap

Water traps are not a requirement of the VESDA smoke detection system. As discussed previously, they are only necessary under vastly varying environmental conditions where internal sampling pipe condensation is a possibility. An example of a water trap is shown below (Figure 16).

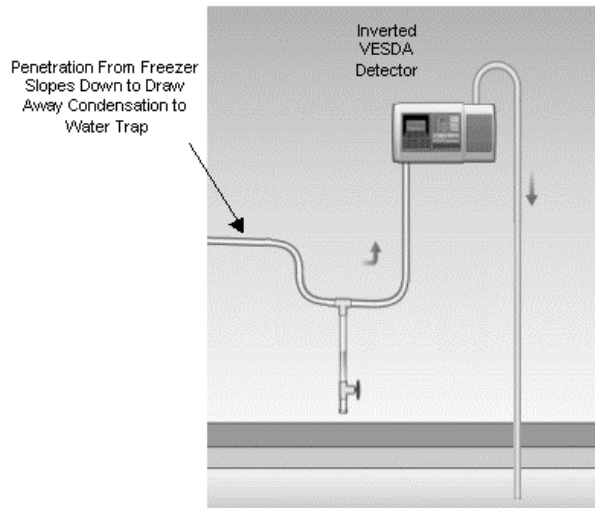


Figure 16 – Example of a water trap.

To install a water trap, a T section of pipe must be fitted to the pipe entering the inverted detector. Water will pool at the stop valve on the downwards pointing arm of the T. The transparent section of pipe allows maintenance personnel to see when water is building up, before it rises above the intersection with the main sampling pipe, and release it via the stop valve. Alternatively, an end cap can be put on the pipe in place of a stop valve. If no condensation is evident after some time, the need for a water trap can be dismissed.

The water trap is intended to catch sampling pipe condensation and prevent water from reaching the detector. If the water trap fills up and water enters the main sampling pipe, a major flow fault will be raised in the VESDA system, which should then prompt the operator to check the status of the water trap before investigating the sampling holes in the freezer.

**Notes!**

- Water trap stop valves and end caps **MUST** be replaced as soon as the water has been drained. Leaving the pipe open will affect the airflow.
- Water traps that involve use of a u-bend in the pipe and rely upon condensate to reduce air-flow in the pipe network have benefits in terms of maintenance where a large amount of condensate gathers, but are generally not recommended because of the risk of all condensate evaporating, causing air entry into the pipe network and a system imbalance.

4.5 Integration with Pre-action Sprinklers

The VESDA smoke detection system can also be used to activate pre-action sprinklers, if installed. For the purposes of pre-action sprinkler activation, VESDA protection in-rack is usually not required even where there are in-rack sprinklers. However, it is important to refer to the FM memorandum 0805^[15] for further details.

The procedure for integrating VESDA with pre-action sprinklers is outlined below:

1. Use ASPIRE2 to design the pipe network and determine Maximum permissible Transport Time. For FM approved, refrigerated storage, VESDA installations, sampling hole spacing should be the same as heat detector spacing as per the latest edition of the FM8-29 Datasheet and Memorandum 08-05[14, 15].
2. Install the VESDA sampling pipe network on the ceiling as shown below (Figure 17).

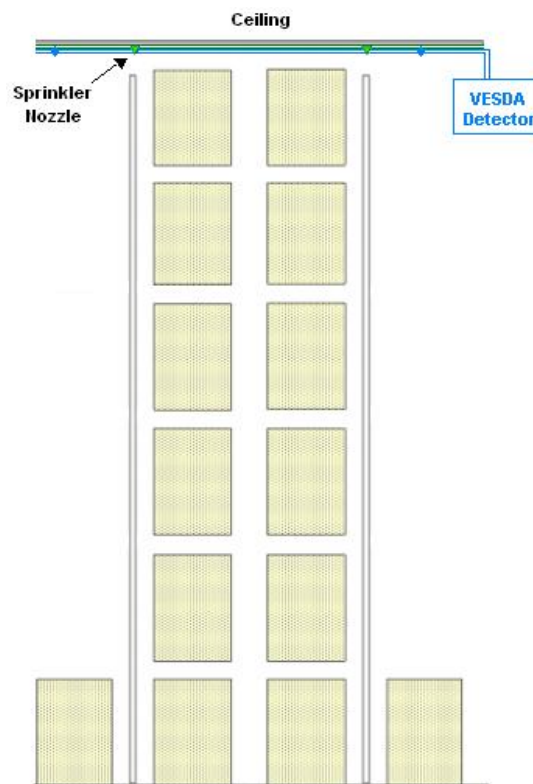


Figure 17 – Arrangement of the VESDA sampling pipe network and sprinkler heads on the ceiling.

3. Set the VESDA Alert alarm threshold for early detection and intervention.
4. Set the VESDA Fire 1 alarm threshold for pre-action sprinkler activation as indicated in Table 3.



Note!

Delays can be configured for both of these alarms.

The smoke thresholds in Table 3 are absolute values, hence the environmental background level must be taken into account. All values are recommendations only, actual values being dependent on individual site conditions such as air change rate, storage rack height etc. Before using any values, the system performance MUST be verified by the commissioning test.

Any VESDA Fire 1 alarm shall put all sprinkler valves, in that particular fire zone, into armed mode.

Table 3 – Design guidelines for VESDA fire alarm settings^[16].

Enclosure Size	Small < 500 m ² (5400 sqft)	Medium 500 – 1000 m ² (5400 – 10800 sqft)	Large 1000 – 1500 m ² (10800 – 16200 sqft)	Extra Large > 1500 m ² (16200 sqft)
Fire Alarm (General 10 m (30 ft) or less)	2%/m (0.61%/ft)	2%/m (0.61%/ft)	1.5%/m (0.46%/ft)	1%/m (0.31%/ft)
Fire Alarm (High Ceiling more than 10 m (30 ft))	1.5%/m (0.46%/ft)	1.5%/m (0.46%/ft)	1%/m (0.31%/ft)	1%/m (0.31%/ft)
Maximum Transport Time Allowed per Zone (s)	See Note Below and consult local codes.	110	110	110

**Note!**

For small enclosures, the Maximum Transport Time Allowed is a function of the ceiling height H and equals $0.14H - 0.8H + 80$. If the Maximum Transport Time Allowed cannot be achieved, install additional detectors in the area. If the Transport Time is close to the maximum allowed, consider reducing the fire alarm threshold by 10 to 20% to compensate. Ceiling height restrictions are for FM approval. Remember also to consult local codes and standards for Transport Time requirements.

4.6 Battery Backup

When using a VESDA system for pre-action suppression activation, in the event of a power outage, a secondary power supply **MUST** be available. This power supply needs to be capable of running a single VESDA detector for a total of 90 hours. This is in compliance with the fact that approved control panels for the automatic release of pre-action or deluge sprinkler systems must have 90 hours of standby power plus 10 minutes worth of power to operate the sprinkler system and alarms^[16].

Where the VESDA system is being used for very early warning smoke detection alone, refer to local codes and standards for the battery backup required.

5 Ongoing Considerations

5.1 Running the VESDA System

For a new refrigerated storage facility, it is preferable that the VESDA system be powered up and running while the refrigerators are being commissioned. This allows the detectors to adjust gradually to the decreasing sampled air temperature.

If installing VESDA detectors in an existing facility, it is recommended that the pipe network inside the refrigerated areas be installed first and that all points where pipes exit these areas be blocked off. This prevents humid air being transferred into the protected area from outside. The blockages can be removed once the rest of the pipe network and detectors, outside the refrigerated areas, have been installed and connected.



Note!

It may be necessary to construct enclosures around detectors to protect them from the weather or mechanical damage.

5.2 Blow-Back Air System

Blow-back air is used to remove ice accumulation around sampling holes with the application of compressed air through the VESDA pipe network. The blow-back system comprises a compressed air supply (air compressor) connected to the pipe network at the point where it exits the refrigerated area. Two arrangements can be used: (i) 2 x 2-way valves (Figure 18), (ii) 3-way valve (Figure 19)

2 x 2-way valves Setup: *Normal Operation Mode;* valve #1 is open, valve #2 closed. *Blow-back Mode;* valve #1 closed, valve #2 open.

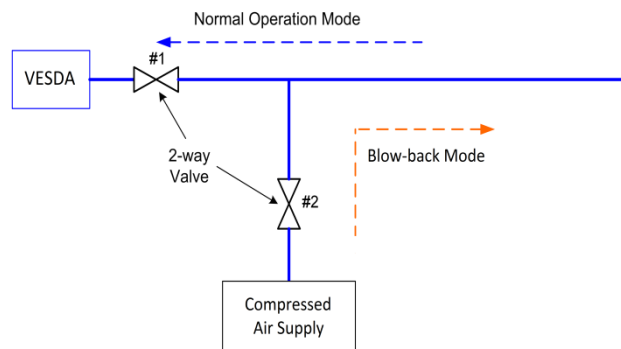


Figure 18. Blow-back arrangement 2 x 2-way valves

3-way valve Setup: A 3-way valve is used to direct the flow between *Normal Operation* and *Blow-back* modes.

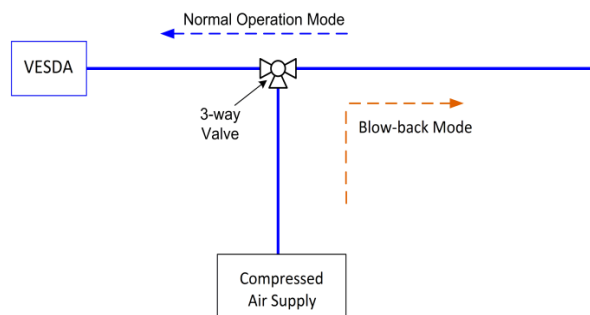


Figure 19. Blow-back arrangement 3-way valve

**Note!**

The pipe ends must be solvent glued onto the valve's end connectors.

The valves should provide a non-restrictive path to the air flow. This can be verified by ensuring the internal effective diameter (not ports) of the valves is similar to the internal diameter of the sampling pipe. A deviation less than 10% is accepted.

**Note!**

The blow-back system can be setup for manual or automatic operation. For automatic operation, the de-energised state of valve(s) should resort to the *Normal Operation Mode* at power failure.

The blow-back frequency will depend on the occurrence of ice accumulation. The following steps will assist in identifying the appropriate blow-back frequency:

1. Following 1 month in *Normal Operation*, perform a smoke transport time test and note the time to detector response.
2. Set pipe network to *Blow-Back Mode*.
3. Apply compressed air (30 to 50kPa) for a 4min period.
4. Set pipe network to *Normal Operation Mode*.
5. Perform a smoke transport time test and note the time to detector response.
6. A deviation in excess of 15% in smoke transport time between Step 1 and 5 results will denote the appropriate interval for the blow-back activity. If deviation is less than 15% repeat above steps ensuring that with each repeat the duration of the VESDA system operation is increased by a one month interval. For example: 2 months for the first repeat, 3 months for the second repeat, etc.

**Note!**

Compressed air can introduce moisture in the pipe resulting in the formation of ice plugs. To prevent ice plug formation, the air intake for compressed air should be taken directly from the refrigerated area. If this is not possible, the compressed air can be dehumidified with a regenerative air dryer – it is recommended the conditioned air dew point temperature is 10°C (18°F) below the coldest temperature in the refrigerated area.

5.3 System Commissioning

Once the VESDA system has been installed, its performance and pipe network integrity can be verified using the ASPIRE2 pipe modelling program. A range of sampled air temperatures may be input to determine Maximum Transport Times for each zone. Calculated Transport Times should be applied conservatively. Smoke tests can then be used to check system performance for both smoke detection and pre-action suppression activation.

5.4 Service and Maintenance

The VESDA system shall be serviced and maintained according to both the local codes and standards and the instructions provided in the Maintenance section of the VESDA System Design Manual^[1].

The frequency of sampling pipe inspection and testing can be determined by the rate of ice build-up to ensure that sampling holes do not become blocked.

For further details on maintaining the Refrigerated Storage Sampling Kit, refer to the Xtralis Refrigerated Storage Sampling Kit Application Note (doc No. 25272).

Appendix – Heat Tracing

There are several techniques for warming sampled air including water heaters, electrically heated tape and passing the pipe through an area that has been heated to 5-10°C (41-50°F). Electrically heated tape is preferred as it is easy to install. An example of a pipe covered with heat tape is shown below (Figure 20). If the surface temperature is over 30°C (86°F), the pipe must be insulated.

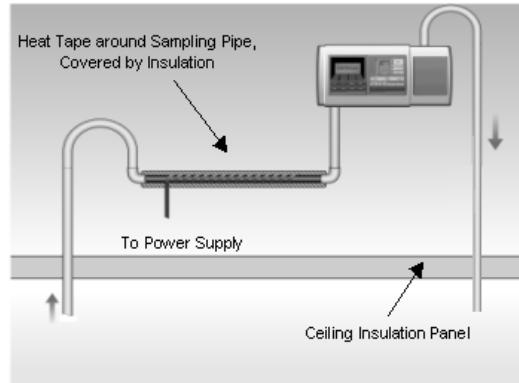


Figure 20 – Example of heat tracing with heat tape.

Raychem heat tape 5BTV2-CT or 3BTV1-CR can be used.

The following charts provide estimates of copper pipe and heat tape lengths required for heat tracing. Variations in ambient temperature are assumed to be negligible due to pipe insulation. The surface of the pipe is kept at a temperature of 35°C (95°F) and the tape is wound around it at 100 mm (4”) intervals along its length.

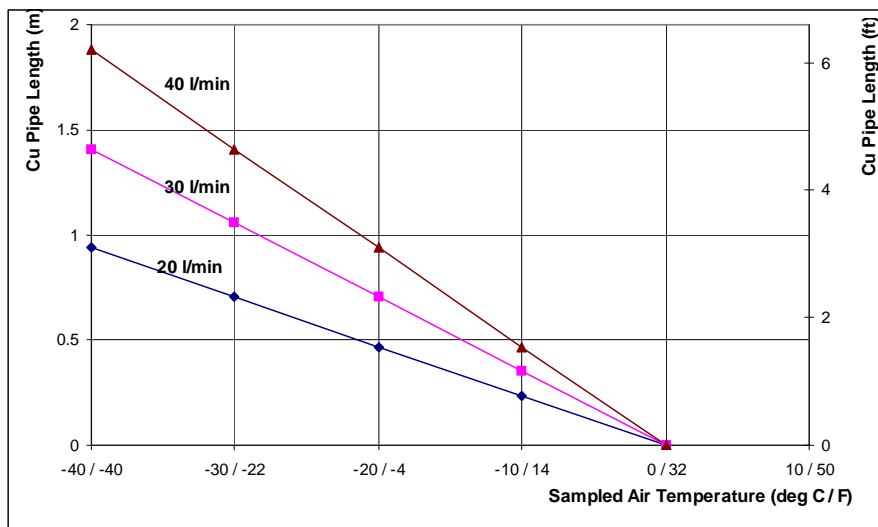


Figure 21 – Estimates of copper pipe length for heat tape.

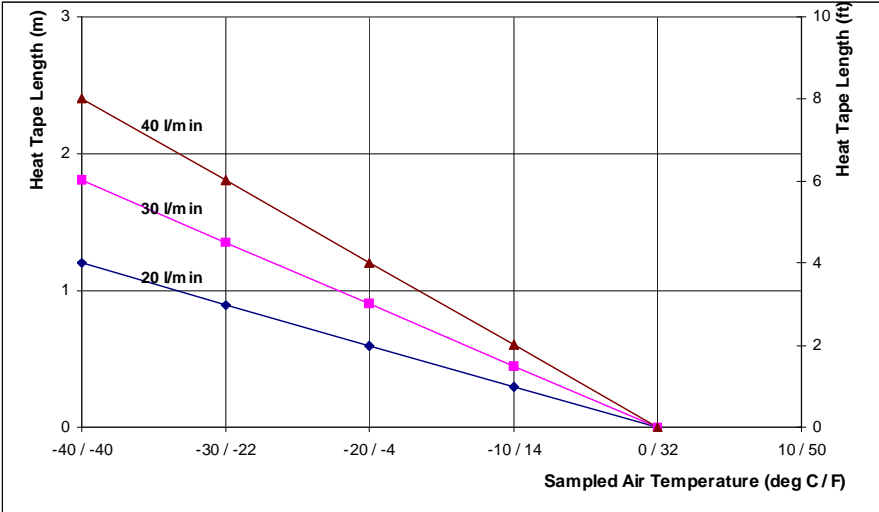


Figure 22 – Estimated heat tape length.

6 References

- [1] Xtralis (2008) VESDA System Design Manual
- [2] NFPA Fire Analysis & Research Division (2003) *Selections from the U.S. fire problem overview report. Leading causes and other patterns and trends Storage properties excluding dwelling garages.*
- [3] Australian Standard AS/NZ 4360 (2004) Risk Management Standard.
- [4] SFPE (2008) Handbook of Fire Protection Engineering, 4th Edition.
- [5] International Fire Engineering Guidelines (2005).
- [6] British Standard BS 7974 (2001) *Application of Fire Safety Engineering Principles to the Design of Buildings – Code of Practice.*
- [7] SFPE (2000) *Engineering Guide to Performance-Based Fire Protection Analysis and Design of Buildings.*
- [8] SFPE & ICC (2004) *The Code Officials' Guide To Performance-Based Design Review.*
- [9] NFPA (2010) *National Fire Alarm Code (72)*
- [10] The Plastics Pipe Institute, Inc. (1999) *Suggested Temperature Limitations for the Operation and Installation of Thermoplastic Pipes in Non-pressure Applications*, TN-11/99.
www.plasticpipes.org.
- [11] PPFA (2003) *Information & Technical Guide – ABS Pipes & Fittings*, www.ppfahome.org.
- [12] Clipsal (2003) *HFT Conduits & Fittings*, www.clipsal.com.
- [13] Fisher, G. (2002) *Planning Fundamentals Industrial Piping Systems*,
www.piping.georgefisher.com.
- [14] FM Global (2007) *Property Loss Prevention Datasheets 8-29.*
- [15] FM (2006) *Memorandum - Engineering Bulletin 08-05.*
- [16] ASHRAE (2003) *Psychometric Chart*, www.ashrae.com.
- [17] FM Global (2003) *Property Loss Prevention Data Sheet 5-40 Fire Alarm Systems.*

7 Disclaimer On The Provision Of General System Design Recommendations

Any recommendation on system design provided by Xtralis is an indication only of what is considered to be the most suitable solution to meet the needs of the common application environments described.

In some cases the recommendations on system design provided may not suit the unique set of conditions experienced in a particular application environment. Xtralis has made no inquiry nor undertaken any due diligence that any of the recommendations supplied will meet any particular application. Xtralis makes no warranty as to the suitability or performance of any recommendation on system design. Xtralis has not assessed the recommendation on system design for compliance with any codes or standards that may apply nor have any tests been conducted to assess the appropriateness of any recommendations on system design. Any person or organization accessing or using a recommendation on system design should, at its own cost and expense, procure that the recommendation on system design complies in all respects with the provision of all legislation, acts of government, regulations, rules and by-laws for the time being in force and all orders or directions which may be made or given by any statutory or any other competent authority in respect of or affecting the recommendation on system design in any jurisdiction in which it may be implemented.

Xtralis products must only be installed, configured and used strictly in accordance with the General Terms and Conditions, User Manual and product documents available from Xtralis. Xtralis accepts no liability for the performance of the recommendation on system design or for any products utilized in the implementation of the recommendation on system design, aside from the General Terms and Conditions, User Manual and product documents.

No statement of fact, drawing or representation made by Xtralis either in this document or orally in relation to this recommendation on system design is to be construed as a representation, undertaking or warranty.

To the extent permitted by law, Xtralis excludes liability for all indirect and consequential damages however arising. For the purposes of this clause, 'consequential damage' shall include, but not be limited to, loss of profit or goodwill or similar financial loss or any payment made or due to any third party.

Recommendations on system design are provided exclusively to assist in design of systems using Xtralis products. No portion of this recommendation on system design can be reproduced without the prior approval in writing of Xtralis. Copyright and any associated intellectual property in any such recommendations on system design or documentation remains the property of Xtralis.

www.xtralis.com

UK and Europe +44 1442 242 330 **D-A-CH** +49 431 23284 1 **The Americas** +1 781 740 2223

Middle East +962 6 588 5622 **Asia** +86 21 5240 0077 **Australia and New Zealand** +61 3 9936 7000

A Disclaimer about this document, statements about Intellectual Property, Copyrights, and Liability, as well as a General Warning are available in an earlier section of this document.

Doc. 11723_15

